

Essential keyboard shortcuts

Note: C= means the keyboard key with the Commodore logo on it.

Menu shortcuts

- Go to 'the menu'
 - Key: C= + restore

While you are in the Ultimate menu

C64U standard keys

Key	Result
F1	Tool Menu
F2	Advanced menu
F3	Page Up
F4	System information
F5	Page down
F6	Online file search
F7	Help
F8	Close Ultimate menu
RUN/STOP	Exit menu

WiFi setup/password special characters

Key/Hotkey	Result
Shift +	{
Shift -	}
Shift £	_
Shift ←	~
Shift ↑	^
←	`
↑	

While in Basic

- Load first program on tape: Shift + RUN/STOP
- Soft reset without clearing the memory: RUN/STOP + RESTORE

USEFUL TIPS:

- Hitting C= + RESTORE will open the Ultimate menu. Hitting that combination again will close the menu.

From here, it is assumed that you will already have opened the Ultimate menu.

- Hit F1, select '*power and reset*' → '*Power OFF*' to shut down the C64 with the keyboard instead of holding down the power button for 4 seconds.
- Hit C= + J to quickly swap joystick ports around (port 1 ↔ port 2) without unplugging your joystick.
- Did you change your screen mode to a mode that your monitor can't handle? Turn off your device and hold C= + N to start in NTSC mode, or C= + P to start in PAL mode.
- You can navigate the Ultimate menu by using the WASD keys, but a joystick works too!
- To get past the display bug in selecting an Authentication Method within the WiFi Network Setup, you will need to change the Color Scheme to "Commodore 1" within the User Interface section.

GEOS

To change input device, C= + I will open the input device selector. Use cursor keys to choose.

From:

<https://c64u.org/dokuwiki/> - **C64 Ultimate Wiki**

Permanent link:

https://c64u.org/dokuwiki/keyboard_control?rev=1784415657

Last update: **2026/07/18 23:00**

