

# Finding the right settings

## GEOS / REU does not work



**There is some doubt of this is actually correct** If you are wanting to use GEOS or any other program that requires the REU, you may need to double check the address for UltiSID 2. Out of the box, UltiSID 2 was at \$DF00, which conflicts with the C64U's built-in REU and causes programs to not see the REU. Instead, I move UltiSID 2 to \$D420, and it now works flawlessly.

- To get there: C64U Menu - Audio Setup - SID Addressing - UltiSID 2 Address.



[troubleshooting, GEOS, REU](#)

From:

<https://c64u.org/dokuwiki/> - **C64 Ultimate Wiki**

Permanent link:

<https://c64u.org/dokuwiki/troubleshooting?rev=1768336016>

Last update: **2026/01/13 20:26**

