

# Finding the right settings

## When setting up Wi-Fi how do you pick authentication method?

When setting up Wi-Fi how do you pick authentication method? The arrow keys don't do anything.

- **Solution:** the issue is the default color scheme doesn't allow you to see which choice you've selected. If you change default color scheme to "Commodore 1" then you can see which authentication method is selected!

## GEOS / REU does not work



### There is some doubt of this is actually correct

If you are wanting to use GEOS or any other program that requires the REU, you may need to double check the address for UltiSID 2. Out of the box, UltiSID 2 was at \$DF00, which conflicts with the C64U's built-in REU and causes programs to not see the REU. Instead, I move UltiSID 2 to \$D420, and it now works flawlessly.

- To get there: C64U Menu - Audio Setup - SID Addressing - UltiSID 2 Address.



## UltimateChat does not work over WiFi

UltimateChat does not work over WiFi. It came on "The Very Second". It works when connected with Ethernet.

- **You are not alone. No known solution at present.** (if you know one, please edit)

## NTSC 1702 monitor - only setting that works is NTSC-50.

when using my new U64 with a traditional NTSC 1702 monitor, I noticed the only setting that works is NTSC-50. When I attempt to use the traditional/standard NTSC setting, the screen jumps up and down. The 1702 monitor works fine with my vintage NTSC C64.

- **Solution:** both NTSC-50 and standard NSTC work fine, but I needed to make some manual adjustments via the horizontal and vertical hold on the 1702.

[troubleshooting](#), [GEOS](#), [REU](#), [wifi](#)

From:

<https://c64u.org/dokuwiki/> - **C64 Ultimate Wiki**

Permanent link:

<https://c64u.org/dokuwiki/troubleshooting?rev=1768337541>

Last update: **2026/01/13 20:52**

